


| Original                   | Replacement  | Original      | Replacement   |
|----------------------------|--|---------------|---|
| Audio                      |  Audio / Lang I/II      | PRG           |  TV/Radio /                  |
| AFFICHE                    |  Power                  | CLR - EFF     |  Exit / Cancel / Clear       |
| Open / Close - OUVRE-FERME |  Eject / Surround       | Up            |  Up                          |
| Angle                      |  Info / Angle           | Left          |  Left                        |
| 1                          |  1                      | OK            |  OK                          |
| Subtitle - SOUS TITRE      |  Subtitle / EQ          | Title - TITRE |  Sound / Title               |
| Search -                   |  Red / Netflix / Search | Right         |  Right                       |
| 2                          |  2                      | Down          |  Down                        |
| 3                          |  3                      | Vol+          |  Vol+                        |
| 4                          |  4                      | MODE          |  Smart / List                |
| 5                          |  5                     | Vol-          |  Vol-                       |
| 6                          |  6                    | ZOOM          |  Zoom / Size               |
| 7                          |  7                    | A-B           |  Yellow / YouTube / Repeat |
| 8                          |  8                    | STOP          |  Stop / Hold               |
| 9                          |  9                    | MARK -        |  Fav / Marker / PC         |
| 0                          |  0                    | Return -      |  Back / Return             |
| Menu                       |  Menu / Home          | Setup - REGL  |  Setup / OPT /             |

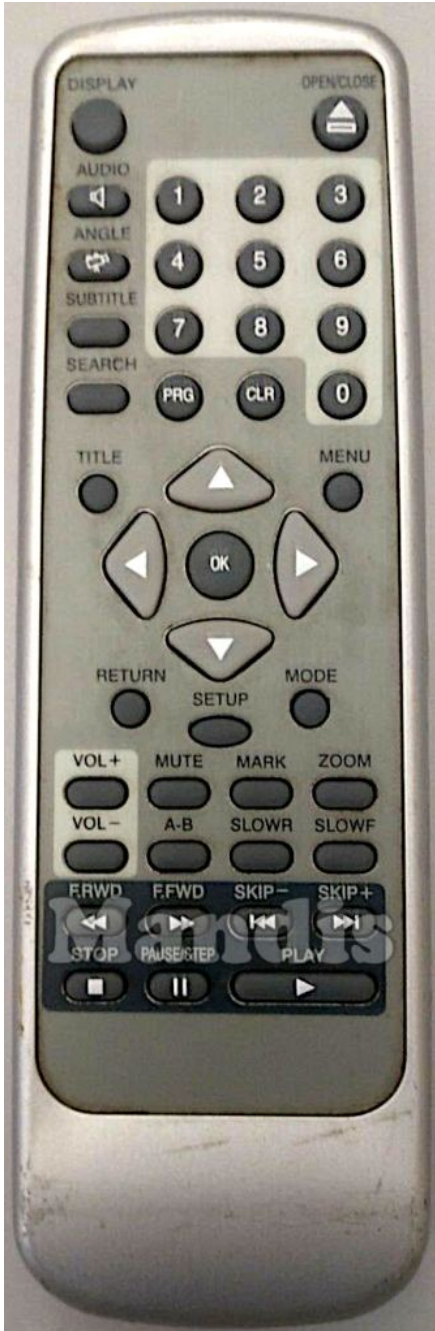



| Original         | Replacement   |
|------------------|---|
| F.Rwd - AR.RAPID |  << / Tune-            |
| F.Fwd - AV.RAPID |  >> / Tune+            |
| Mute -           |  Mute / Dimmer         |
| Slow R -         |  CH- / Page-           |
| Slow F -         |  CH+ / Page+           |
| Skip+ / SAUT+    |  >>I / Preset+         |
| Skip- / SAUT-    |  I<< / Preset-         |
| PAUSE/IMAGE      |  Pause / Step / Freeze |
| Play - LECTURE   |  Play / Slow           |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |
|                  |   |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

