
 

 
 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 EPG	 Guide / EPG / -/--
 Settings	 Setup / OPT /
 Input	 AV / Input / RDS
 Up	 Up

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Menu	 Menu / Home
 NETFLIX	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP /
 Vol+	 Vol+
 Google Assistant	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-
 Home	 D.Menu / Top
 Home	 Display / Media
 P-	 CH- / Page-





Original	Replacement	Original	Replacement
Text	Text / Goto		
USB	+ Shift + 8		
I/II	Audio / Lang I/II		
Subt	Subtitle / EQ		
Play / Text Mix	Play / Slow		
Pause	Pause / Step / Freeze		
Stop / Text Hold	Stop / Hold		
Text Size	Zoom / Size		
<< / Text	<< / Tune-		
I<< / Text Index	I<< / Preset-		
>>I / Text Reveal	>>I / Preset+		
>> / Text Cancel	>> / Tune+		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

Original	Replacement

