






 

 


 
 



 



 





 



 



 


 
 


 
 



 
 


 

 

 

 

 












Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol -
 Open/Close	 Eject	 I<<	 I<<
 Function	 Media	 >>I	 >>I
 [I]/PLII	 Dual	 <<	 <<
 Mute	 Mute	 >>	 >>
 DSP/EQ	 Subt	 Stop	 Stop
 1/S.Vol	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 Disc Menu	 D. Menu
 4	 4	 Home	 Smart
 5	 5	 Title Menu	 Menu
 6	 6	 Tools	 Options
 7/P.Scan	 7	 Info	 Info
 8	 8	 Return	 Back
 9	 9	 Exit	 Exit
 0	 0	 Up	 Up
 Vol+	 Vol +	 Tuning Up	 Ch +



