



Original		Replacement		Original		Replacement	
	Power		Power		>>		>>  / Preset+
	Function Tv		AV / Input / RDS		<<		<< / Tune-
	Eject		Eject / Surround		>>		>> / Tune+
	Sleep		Sleep / Timer		Stop		Stop / Hold
	1/RDS Display		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3/TA		3		Vol+		Vol+
	4/PTY-		4		Mute		Mute / Dimmer
	5/PTY Search		5		Tuning/CH+		Shift + >> /
	6/PTY+		6		Tuning/CH+		CH+ / Page+
	7		7		Vol-		Vol-
	8		8		Repeat		Shift + Green / APP /
	9		9		Tuning/CH-		CH- / Page-
	PL II		Audio / Lang I/II		Tuning/CH-		Shift + << /
	0		0		Disc Menu		D.Menu / Top
	DSP/EQ		Subtitle / EQ		Menu		Menu / Home
	I<<		I<< / Preset-		Title Menu		Sound / Title











 



















 







Original	Replacement	Original	Replacement
	Tools		Setup / OPT /
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green/Tuner		Green / APP / Repeat
	Yellow/MO/ST		Yellow / YouTube / Repeat
	Blue/CD Ripping		Blue / Prime Video / Random
	Dimmer		Shift + Mute / Dimmer
	S.Vol		Smart / List
	P.Bass/Audio Upscale		Display / Media

Original	Replacement	Original	Replacement







Original	Replacement
 Power	 Power
 Function Tv	 AV / Input / RDS
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow

Original	Replacement
 Pause	 Pause / Step / Freeze
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search



