







 



 



 







 

 

 

 

 











 







 



 















Original	Replacement	Original	Replacement
Power	Power	Tools	Setup / OPT /
Mute	Mute / Dimmer	vTuner	Text / Goto
Play	Play / Slow	Menu	Menu / Home
Pause	Pause / Step / Freeze	Up	Up
Stop	Stop / Hold	Info	Info / Angle
<<	<< / Tune-	Left	Left
>>	>> / Tune+	Enter	OK
I<<	I<< / Preset-	Right	Right
>>I	>>I / Preset+	Exit	Exit / Cancel / Clear
3D Sound	Sound / Title	Down	Down
Dolby PL II	Audio / Lang I/II	Return	Back / Return
S/W Level	Subtitle / EQ	Vol +	Vol+
Eject	Eject / Surround	Smart Hub	Smart / List
Full Screen	Zoom / Size	Tuning / CH +	CH+ / Page+
Sleep	Sleep / Timer	Vol -	Vol-
Function	TV/Radio /	DSP	Display / Media
Disc Menu	D.Menu / Top	Tuning / CH -	CH- / Page-





Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop / Hold
	TV Source		AV / Input / RDS		Play		Play / Slow
	Sleep		Sleep / Timer		Pause		Pause / Step / Freeze
	1		1		Vol+		Vol+
	2		2		Mute		Mute / Dimmer
	3		3		CH+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		CH-		CH- / Page-
	6		6		Menu		Menu / Home
	7		7		Tools		Setup / OPT /
	8		8		Up		Up
	9		9		Info		Info / Angle
	0		0		Left		Left
	I<<		I<< / Preset-		Enter		OK
	>>I		>>I / Preset+		Right		Right
	<<		<< / Tune-		Return		Back / Return
	>>		>> / Tune+		Down		Down



