








Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Original	Replacement	Original	Replacement
 Power	 DIMMER MUTE	 TV	 DVD
 Source	 SHIFT	 SAT	 AUX
 Picture	 TV	 SLOW	 STEP - FREEZE
 Sound	 HOLD	 REC MODE	 PRESET+
 Still	 TUNE-	 TUNE+	 PRESET-
 Mute	 TITLE	 LANG VII	 EQ
 1	 AUDIO	 SUBTITLE	 SURROUND
 2	 FORMAT	 SIZE	 TIMER
 3	 PICTURE	 ZOOM	 PROGRAM
 4	 TOP MENU	 OPT-TOOLS	 GOTO
 5	 D.MENU	 SETUP	 TEXT
 6	 HOME	 ANGLE	 INFO
 7	 MENU	OK	 RETURN
 8	EXIT	CANCEL	BACK
9	LIST	SMART	MEDIA
Red	VOL+	DISPLAY	CH PAGE
Green	VOL-	TV	DVD
Blue	CH-	CD - STB	VIDEO
Yellow	CH+	TAPE	TUNER
Red	VOL-	AUX - HDD	USB
Green	VOL+	BLUETOOTH	FAV
Blue	NETFLIX	APP	MEDIA
Yellow	YouTube	DISPLAY	CH PAGE
Red	Prime Video	TV	DVD
Green	SEARCH	VIDEO	TAPE
Blue	REPEAT	AUX - HDD	USB
Yellow	REPEAT A-B	BLUETOOTH	FAV
Red	RANDOM	HDMI - BAT	PC
Green	NETFLIX	GUIDE EPG	FAV MARKER
Blue	APP	SEARCH	REPEAT
Yellow	YouTube	REPEAT A-B	RANDOM
Red	Prime Video	RANDOM	RANDOM



