

 
 


 



 























 
 


 

































	Original	Replacement		Original	Replacement
	 1	 1		 Left / Vol-	 Left
	 2	 2		 Left / Vol-	 Vol-
	 3	 3		 OK	 OK
	 Power	 Power		 Right / Vol+	 Right
	 4	 4		 Right / Vol+	 Vol+
	 5	 5		 Mute	 Mute / Dimmer
	 6	 6		 Menu / Setup	 Menu / Home
	 TV/R	 TV/ Radio /		 Menu / Setup	 Setup / OPT /
	 7	 7		 Down / CH-	 Down
	 8	 8		 Down / CH-	 CH- / Page-
	 9	 9		 Audio1 -	 << / Tune-
	 EPG	 Guide / EPG / -/--		 Audio1 +	 >> / Tune+
	 0	 0		 Set / Info	 Info / Angle
	 Up / CH+	 Up		 Next / ESC	 Exit / Cancel / Clear
	 Up / CH+	 CH+ / Page+		 Audio2 -	 I<< / Preset-
	 A/D	 Sound / Title		 Audio2 +	 >>I / Preset+
	 (<>) L	 Audio / Lang I/II		 Down	 Smart / List



