









 







 


























 










| Original    | Replacement   | Original   | Replacement   |
|-------------|---|------------|---|
| PWR On/Off  |  Power                 | OK Enter   |  OK                    |
| Mute        |  Mute / Dimmer         | Menu Right |  Right                 |
| Epg         |  Guide / EPG / -/--    | Exit       |  Exit / Cancel / Clear |
| Subt.List   |  Subtitle / EQ         | Menu Down  |  Down                  |
| Opt?        |  Setup / OPT /         | Back       |  Back / Return         |
| App         |  Shift + Green / APP / | Volume+    |  Vol+                  |
| Sleep Timer |  Sleep / Timer         | Audio      |  Audio / Lang I/II     |
| TV          |  TV/Radio /            | CH/Page+   |  CH+ / Page+           |
| Info        |  Info / Angle          | Volume-    |  Vol-                  |
| Video       |  Shift + 4            | CH/Page-   |  CH- / Page-          |
| Text        |  Text / Goto         | 1. ?       |  1                   |
| Zoom        |  Zoom / Size         | 2abc       |  2                   |
| TV/SAT      |  AV / Input / RDS    | 3def       |  3                   |
| Menu        |  Menu / Home         | 4ghi       |  4                   |
| Menu Up     |  Up                  | 5jkl       |  5                   |
| Display     |  Display / Media     | 6mno       |  6                   |
| Menu Left   |  Left                | 7pqrm      |  7                   |



| Original      | Replacement  | Original | Replacement  |
|---------------|--|----------|--|
| 8tuv          |  8  | Sys/Serv |  D.Menu / Top |
| 9wxyz         |  9  |          |  |
| Guide Pilote  |  +  Shift + Guide / EPG / -- |          |  |
| 0/10          |  0  |          |  |
| FAV Pref.     |  Fav / Marker / PC  |          |  |
| Red           |  Red / Netflix / Search   |          |  |
| West          |  I<< / Preset-  |          |  |
| Dev           |  >>I / Preset+  |          |  |
| Freeze        |  +  Shift + Pause / Step /   |          |  |
| Green         |  Green / APP / Repeat  |          |  |
| Yellow        |  Yellow / YouTube / Repeat  |          |  |
| East          |  Rec / Rec Mode   |          |  |
| Blue          |  Blue / Prime Video / Random  |          |  |
| Dec/Pause     |  Pause / Step / Freeze  |          |  |
| Lang./Rewind  |  << / Tune-   |          |  |
| H/V Play      |  Play / Slow  |          |  |
| LNB F.Forward |  >> / Tune+   |          |  |

