



 


 

 






 



 


 

 

 






 






 



 



 



 

 












Original		Replacement		Original		Replacement	
	Power		Power		Display		Info
	Mute		Mute		Sleep		Sleep
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		FAV/List		Shift + Pre Ch
	6		6		Clock		Shift + AV
	7		7		List		List
	8		8		Tv/Radio		TV/R
	9		9		Aspect		Format
	0		0		Freeze		Pause
	-/--		Guide		Index		Options
	Recall		Pre Ch		Cancel		Back
	Menu		Menu		Subpage		Subt
	Source		AV		Text		Text
	Exit		Exit		Size		Eject





Original		Replacement		Original	Replacement
	Reveal		Media		
	Hold		Dual		
	Mix	 + 	Shift + Media		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Cyan		Blue		
	Nicam		Smart		
	P.Mode	 + 	Shift + Format		
	S.Mode	 + 	Shift + Dual		
	OK		Ok		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		

