



Original	Replacement
	Mute / Dimmer
	Power
	Display / Media
	Guide / EPG / -/--
	Sleep / Timer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Zoom / Size
	0
	AV / Input / RDS

Original	Replacement
	Setup / OPT /
	Picture / Format
	TV/Radio /
	Smart / List
	Rec / Rec Mode
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Red / Netflix / Search
	Up
	Blue / Prime Video / Random
	Left
	OK
	Right
	Exit / Cancel / Clear
	Info / Angle
	Down
	<< / Tune-



 

 

 



 

 

 

 



 

 

 

 

 

 

 



 

 

 

 



 
 


 
 
 

 
 
 

 



 





 



Original		Replacement		Original		Replacement	
	Stop		Stop / Hold				
	Play / Pause		Play / Slow				
	Play / Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Prog -		CH- / Page-				
	Prog +		CH+ / Page+				
	Volume -		Vol-				
	Volume +		Vol+				
	TXT		Text / Goto				
	Still	 + 	Shift + Pause / Step /				
	Sound		Sound / Title				
	PIP		D.Menu / Top				
	Menu		Menu / Home				
	HDMI	 + 	Shift + 0				





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 More	 Fav / Marker / PC
 ?	 Smart / List
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Aspect / Zoom	 Zoom / Size
 0 / AV	 0
 0 / AV	 AV / Input / RDS

Original	Replacement
 OPT	 Setup / OPT /
 SFI	 Display / Media
 TV / Radio	 TV/Radio /
 Genre	 D.Menu / Top
 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Red	 Red / Netflix / Search
 Up	 Up
 Blue	 Blue / Prime Video / Random
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 Down	 Down
 <<	 << / Tune-





Original	Replacement
	Stop / Hold
	Play / Slow
	>> / Tune+
	CH- / Page-
	CH+ / Page+
	Vol-
	Vol+
	Text / Goto
	Pause / Step / Freeze
	Sound / Title
	Picture / Format
	Menu / Home
	+  Shift + 0

Original	Replacement





Original	Replacement		
	Mute		Mute / Dimmer
	Power		Power
	More		Display / Media
	?		Guide / EPG / -/--
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Zoom		Zoom / Size
	0 / AV		0
	0 / AV		AV / Input / RDS

Original	Replacement		
	OPT		Setup / OPT /
	SFI		Picture / Format
	TV / Radio		TV/Radio /
	Genre		Smart / List
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Up		Up
	Blue		Blue / Prime Video / Random
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Info		Info / Angle
	Down		Down
	<<		<< / Tune-





Original	Replacement	Original	Replacement
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Prog -		CH- / Page-
	Prog +		CH+ / Page+
	Volume -		Vol-
	Volume +		Vol+
	TXT		Text / Goto
	Still	+	Shift + Pause / Step /
	Sound		Sound / Title
	PIP		D.Menu / Top
	Menu		Menu / Home
	HDMI	+	Shift + 0

