



Original		Replacement		Original		Replacement	
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
+10	+10	GUIDE EPG	Guide / EPG / -/--				
+10	0/10	HDMI - BAT 0	0				
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat				
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat				
SLOW	Slow	SHIFT + SLOW	Shift + Play /				
STEP	Step	SHIFT + STEP - FREEZE	Shift + Pause / Step /				
PROG/EPG	Prog / EPG	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program				
ANGLE/DEL	Angle / Del	SHIFT + RETURN BACK	Shift + Back / Return				
N/P	N/P	SHIFT + MEDIA DISPLAY	Shift + Display / Media				
VIDEO	Video	SHIFT + VIDEO 4	Shift + 4				
PROG/EPG	Prog / EPG	SHIFT + GUIDE EPG	Shift + Guide / -/--				

