 

 
































Original	Replacement	Original	Replacement
	Power		Power
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Back		Back / Return
	Vol+		Vol+
	Scan		Smart / List
	P+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	Zoom		Zoom / Size
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Mute		Mute / Dimmer
	Red / Picture		Red / Netflix / Search
	Red / Picture		Picture / Format
	Green / Sound		Green / APP / Repeat
	Green / Sound		Sound / Title
	Yellow / Sleep		Yellow / YouTube / Repeat
	Yellow / Sleep		Sleep / Timer
	Blue / Call		Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	Text		Text / Goto				
	Mix		Shift + Text /				
	Size		Shift + Zoom /				
	Index		Rec / Rec Mode				
	Hold		Stop / Hold				
	Reveal		Play / Slow				
	Subpage		Subtitle / EQ				
	Cancel		Exit / Cancel / Clear				
	DVB Menu		D.Menu / Top				
	i		Info / Angle				
	EPG		Guide / EPG / -/--				
	ESC		Fav / Marker / PC				
	DVB		Display / Media				
	Freeze		Pause / Step / Freeze				
	I/II		Audio / Lang I/II				

