





 

 









 









 







	Original	Replacement		Original	Replacement
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Freeze
	Source		AV		USB
	CH List		List		Text





Original	Replacement	Original	Replacement
 EPG	 Guide	 I<<	 I<<
 FAV	 Pre Ch	 >>I	 >>I
 Info	 Info	 Play	 Play
 Red	 Red	 Pause	 Pause
 Green	 Green	 Stop	 Stop
 Yellow	 Yellow	 Rec/Rep	 Rec
 Blue	 Blue		
 DTV	 TV/R		
 Hold	 Eject		
 List	 Shift + List		
 Subpage	 Shift + Subt		
 Index	 Smart		
 PVR List	 D. Menu		
 Mix	 Shift + 3D		
 Subtitle	 Subt		
 <<	 <<		
 >>	 >>		

