




 

 



 











 

 



 



 

 


 


 
 










 


 

 
 
 











Original	Sustituto
	 Power
	 AV
	 TV/R
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Text
	 Info
	 Menu
	 Format

Original	Sustituto
	 Dual
	 Ch +
	 Ch -
	 Up
	 Down
	 Right
	 Left
	 Vol +
	 Vol -
	 Media
	 Mute
	 Exit
	 Shift + Dual
	 Subt
	 Options
	 Eject
	 Ok





Original	Sustituto		
CVBS1	CVBS1	SHIFT + 1	Shift + 1
CVBS2	CVBS2	SHIFT + 2	Shift + 2
CVBS3	CVBS3	SHIFT + 3	Shift + 3
Y Pb Pr	Y Pb Pr	SHIFT + 4	Shift + 4
YC1	YC1	SHIFT + 5	Shift + 5
YC2	YC2	SHIFT + 6	Shift + 6
PC	PC	FAV PRE-CH	Pre Ch
HDMI	DVI / HDMI	HOME SMART	Smart
[≡?]/ MTS	[≡?]/ MTS	DISC NAV LIST	List
[≡] / Sleep	[≡] / Sleep	PROG SLEEP	Sleep
[≡i] / Time	[≡i] / Time	ECO 3D	3D
[≡] / PREPG	[≡] / PREPG	-/-- GUIDE	Guide
Red / Delete	Red / Delete	A	Red
Green / Skip	Green / Skip	B	Green
Yellow / Insert	Yellow / Insert	C	Yellow
Blue / Replace	Blue / Replace	D	Blue

Original	Sustituto

