

 

 

 

 
 
 





 
 




 
 
 


Original	Sustituto
Standby	Power
Source	AV
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
P Mode	Format
S Mode	Dual
Freeze	Smart
TXT	Text
Mix / Fav List	Pre Ch
Size / Subtitle	Subt
Cancel / Audio	Shift + Dual
Record	Rec
<< / Index	<<
>> / Hold	>>
I<< / Reveal	I<<

Original	Sustituto
>>I / Subpage	>>I
Menu	Menu
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Play/Pause / Timeshift	Play
Play/Pause / Timeshift	Pause
Stop / EPG	Stop
Stop / EPG	Guide
Vol +	Vol +
Vol -	Vol -
Mute	Mute
TV / Radio	TV/R
CH +	Ch +





Original	Sustituto
 CH -	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Info
 Recall	 Back

Original	Sustituto

