



Original	Sustituto	Original	Sustituto
Power	Power	Subtitle	Subtitle / EQ
Eject	Eject / Surround	Zoom/Size	Zoom / Size
Tv/Radio	TV/Radio /	Aspect	Shift + Picture / Format
Red/Goto	Red / Netflix / Search	Subpage	Shift + Subtitle / EQ
Red/Goto	Shift + Text /	Media	Shift + Display / Media
Green/Angle	Info / Angle	Play	Play / Slow
Green/Angle	Green / APP / Repeat	Pause	Pause / Step / Freeze
Yellow/Repeat	Shift + Green / APP /	<< / Tune-	
Yellow/Repeat	Yellow / YouTube / Repeat	>> / Tune+	
Blue/A-B	Shift + Blue / Prime	Rec	Rec / Rec Mode
Blue/A-B	Blue / Prime Video / Random	D.Setup	Setup / OPT /
FAV	Fav / Marker / PC	Stop	Stop / Hold
Text	Text / Goto	I<<	I<< / Preset-
Freeze/Hold	Shift + Stop /	>>I/Index	>>I / Preset+
Freeze/Hold	Shift + Pause / Step /	>>I/Index	Smart / List
EPG	Guide / EPG / -/--	Menu	Menu / Home
D.Menu	D.Menu / Top	Lang/Audio	Audio / Lang I/II

Original	Sustituto	Original	Sustituto
Subtitle	Subtitle / EQ	Subtitle / EQ	
Zoom/Size	Zoom / Size	Zoom / Size	
Aspect	Shift + Picture / Format	Aspect	
Subpage	Shift + Subtitle / EQ	Subpage	
Media	Shift + Display / Media	Media	
Play	Play / Slow	Play	
Pause	Pause / Step / Freeze	Pause	
<< / Tune-	<< / Tune-	<< / Tune-	
>> / Tune+	>> / Tune+	>> / Tune+	
Rec	Rec / Rec Mode	Rec	
D.Setup	Setup / OPT /	D.Setup	
Stop	Stop / Hold	Stop	
I<<	I<< / Preset-	I<<	
>>I/Index	>>I / Preset+	>>I/Index	
>>I/Index	Smart / List	>>I/Index	
Menu	Menu / Home	Menu	
Lang/Audio	Audio / Lang I/II	Lang/Audio	





Original	Sustituto
	Up
	Left
	OK
	Right
	Sleep / Timer
	Down
	Shift + Sound / Title
	Exit / Cancel / Clear
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3

Original	Sustituto
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0
	Back / Return
	AV / Input / RDS
	Picture / Format
	Sound / Title

