



Original	Sustituto
Power	Power
VCR/DVD	Media
DVD Timer	Green
VCR Timer	Red
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/AUX	0
X/Cancel	Exit
Showview/Video Plus+	Guide
Prog/Check	Sleep

Original	Sustituto
Display	Info
On Screen/Progressiv	3D
Top	Shift + Menu
Menu	Menu
Set Up	Options
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
I<</Previous	I<<
>>/Next	>>I
<</Slow-	<<
Play/Select	Play
>>/Slow+	>>
Stop/Clear	Stop





Original		Sustituto		Original		Sustituto	
	Pause		Pause				
	Rec		Rec				
	Remain/Rec		Shift + Rec				
	←		Pre Ch				
	→		Blue				
	Angle/Live Check		AV				
	Subtitle		Subt				
	TV/DVD-TV/VCR		TV/R				
	Mute/Audio		Mute				
	PR+		Ch +				
	PR- TV/CBL/DVD		Ch -				
	Vol+ Tv		Vol +				
	Vol- Tv		Vol -				





Original	Sustituto
Power	Power
VCR/DVD	Media
DVD Timer	Green
VCR Timer	Red
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/AUX	0
X/Cancel	Exit
Memory/Mark	Smart
Showview/Video Plus+	Guide

Original	Sustituto
Prog/Check	Sleep
Display	Info
On Screen/Progressiv	3D
Top	Shift + Menu
Menu	Menu
Set Up	Options
Return	Back
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
I<</Previous	I<<
>>/Next	>>I
<</Slow-	<<
Play Select	Play
>>/Slow+	>>




 



 

 





 





 



 

 



 






Original		Sustituto		Original	Sustituto
	Stop/Clear		Stop		
	Pause		Pause		
	Rec		Rec		
	Remain/Rec		Shift + Rec		
	←		Pre Ch		
	→		Blue		
	Angle/Live Check		AV		
	Subtitle		Subt		
	TV/DVD-TV/VCR		TV/R		
	Mute/Audio		Mute		
	PR+		Ch +		
	PR- TV/CBL/DVD		Ch -		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		





Original	Sustituto
 Power	 Power
 VCR/DVD	 Media
 DVD Timer	 Green
 VCR Timer	 Red
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 Prog/Check	 Sleep
 Display	 Info
 Top	 Shift + Menu

Original	Sustituto
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<</Previous	 I<<
 >>/Next	 >>I
 <</Slow-	 <<
 Play/Select	 Play
 >>/Slow+	 >>
 Stop/Clear	 Stop
 Pause	 Pause
 Rec	 Rec
 Remain/Rec	 Shift + Rec
	 Pre Ch
	 Blue





	Original	Sustituto		Sustituto
	Angle/Live Check			AV
	Subtitle			Subt
	PR+			Ch +
	PR- TV/CBL/DVD			Ch -
	Vol+ Tv			Vol +
	Vol- Tv			Vol -

	Original	Sustituto

