



Original	Sustituto
	Power
	Eject
	Blue
	Yellow
	Green
	Red
	Vol -
	Vol +
	I<<
	>>I
	Ch -
	Ch +
	Stop
	Play
	Pause
	+  Shift + Sleep
	Info

Original	Sustituto
	AV
	Sleep
	Dual
	Subt
	TV/R
	Mute
	Text
	Format

















 

 

 




Original		Sustituto		Original		Sustituto	
	Power		Power		Timer		AV
	Open/Close		Eject		Sleep		Sleep
	USB		Blue		DBB		Dual
	CD		Yellow		DSC		Subt
	Tuner		Green		RDS/News		TV/R
	AUX		Red		Mute		Mute
	Vol-		Vol -		Repeat		Text
	Vol+		Vol +		Shuffle		Format
	I<<		I<<				
	>>I		>>I				
	Album/Preset		Ch -				
	Album/Preset		Ch +				
	Stop		Stop				
	Play / Pause		Play				
	Play / Pause		Pause				
	Program		Shift + Sleep				
	Clock/Display		Info				





Original	Sustituto
 Power	 Power
 Open/Close	 Eject
 USB	 Blue
 CD	 Yellow
 Tuner	 Green
 AUX	 Red
 Vol-	 Vol -
 Vol+	 Vol +
 I<<	 I<<
 >>I	 >>I
 Album/Preset	 Ch -
 Album/Preset	 Ch +
 Stop	 Stop
 Program	 Shift + Sleep
 Clock/Display	 Info
 Timer	 AV
 Sleep	 Sleep

Original	Sustituto
 DBB	 Dual
 DSC	 Subt
 RDS/News	 TV/R
 Mute	 Mute







Original		Sustituto		Original	Sustituto
	USB		Blue		
	CD		Yellow		
	Tuner		Green		
	AUX		Red		
	Open/Close		Eject		
	Power		Power		
	Vol+		Vol +		
	Vol-		Vol -		
	Clock/Display		Info		
	Timer		AV		
	Sleep		Sleep		
	DBB		Dual		
	DSC		Subt		
	RDS/News		TV/R		
	Mute		Mute		

