




 



 


 

 
 
 
 

 
 
 

 

 
 
 
 

 




Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV
	YouTube		Media
	Netflix		Smart
	FPay		Shift + Smart
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	Lang.		Dual
	<<		<<
	>>		>>
	[≡]...		Subt
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Menu		Menu
	WWW		Shift + Media
	Q.Menu		D. Menu
	Vol+		Vol +
	Vol-		Vol -





Original		Sustituto		Original	Sustituto
	P+		Ch +		
	P-		Ch -		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	OK		Ok		
	Back		Back		
	Exit		Exit		
	[-O-]		Format		
	i		Info		
	FAV		Shift + Pre Ch		
	Mute		Mute		
	Music/Picture/Mov		Options		
	*/O		3D		
	[≡]		Text		
	Guide		Guide		

