 


 

 




 
 
 

 
 
 

 
 
 


 

 
 
 
 




 




Original	Sustituto	Original	Sustituto
 Power	 Power	 Pause / Zoom	 Pause
 16:9 Wide	 Format	 Pause / Zoom	 Eject
 Red	 Red	 Stop / Reveal	 Stop
 Green / Subtitle	 Green	 Back / TTX	 Back
 Green / Subtitle	 Subt	 Back / TTX	 Text
 Yellow / FAV	 Yellow	 Info	 Info
 Yellow / FAV	 Shift + Pre Ch	 Rec	 Rec
 Blue / EPG	 Blue	 L / R	 Shift + Dual
 Blue / EPG	 Shift + Guide	 Smart S	 Smart
 I<< / Hold	 I<<	 Up	 Up
 >>I / List	 List	 Right	 Right
 >>I / List	 >>I	 Down	 Down
 << / Language	 Dual	 Left	 Left
 << / Language	 <<	 OK	 Ok
 >> / Radio	 >>	 Source	 AV
 >> / Radio	 TV/R	 Menu	 Menu
 Play / Index	 Play	 Vol +	 Vol +





	Original	Sustituto	Original	Sustituto
	Vol -			Vol -
	F1			Media
	Mute			Mute
	CH +			Ch +
	CH -			Ch -
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	Recall			Pre Ch
	Guide			Guide

