

 
 
 



 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 

 
 


 
 







 




 
 
 

 

 


 

 

 
 
 
 
 



 




Original	Sustituto	Original	Sustituto
	Power		Power
	Info		Info
	3D		3D
	ANT		D. Menu
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Reveal / Source		AV
	Audio I/II		Dual
	CH +		Ch +
	CH -		Ch -
	Index		Media
	FAV		Pre Ch
	Vol +		Vol +
	Vol -		Vol -
	Menu		Menu
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	List / Repeat		List
	List / Repeat		Shift + Text
	EPG		Guide
	www		Smart





Original	Sustituto	Original	Sustituto
 Rec	 Rec	 Still	 Shift + Stop
 Play	 Play	 Radio	 TV/R
 Pause	 Pause	 [≡X]	 Shift + Exit
 Stop	 Stop		
 <<	 <<		
 >>	 >>		
 Aspect / Size	 Format		
 [≡o] / Subtitle	 Subt		
 T-Shift	 Options		
 Recall	 Back		
 Red	 Red		
 Green	 Green		
 Yellow / I<<	 Yellow		
 Yellow / I<<	 I<<		
 Blue / >>I	 Blue		
 Blue / >>I	 >>I		
 Text	 Text		

