 
 
 
 


 







Original	Sustituto
 Power	 Power
 Nicam/Eject	 Eject
 Mute	 Mute
 Display	 Shift + Info
 Sleep	 Sleep
 Aspect	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch

Original	Sustituto
 Recall	 Back
 Tv-Menu	 Menu
 Source	 AV
 DVD Setup	 Options
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Red/Repeat	 Red
 Green/Zoom	 Green
 Yellow/Angle	 Yellow
 Blue/Goto	 Blue
 Text/Audio	 Text
 Tv/Radio/Menu	 TV/R
 Exit	 Exit
 P.Mode	 Shift + Format





Original	Sustituto	Original	Sustituto
 S.Mode	 Dual	 Info/Title	 Info
 Vol+	 Vol +		
 Vol-	 Vol -		
 CH+	 Ch +		
 CH-	 Ch -		
 I<</Index	 I<<		
 Play/Reveal	 Play		
 Pause	 Pause		
 >>I/Subpage	 >>I		
 <<	 <<		
 Stop/Size	 Stop		
 >>	 >>		
 Hold/A-B/Rec List	 List		
 Rec/Slow	 Rec		
 Time Shift	 Smart		
 EPG/Program	 Guide		
 Subtitle	 Subt		

