 



 



 











 



 
 





 


 
 
 

 
 
 

 
 
 



 







 
 



 



 






Original	Sustituto	Original	Sustituto
 Power	 Power	 Green	 Green
 Input TV	 TV/R	 Yellow	 Yellow
 Input Av	 AV	 Blue	 Blue
 Aspect	 Format	 Text	 Text
 Viera Link	 Smart	 STTL	 Subt
 Option	 Options	 Index	 Media
 Direct TV Rec	 Rec	 Hold	 Shift + Stop
 Guide	 Guide	 1	 1
 Exit	 Exit	 2	 2
 Up	 Up	 3	 3
 Left	 Left	 4	 4
 OK	 Ok	 5	 5
 Right	 Right	 6	 6
 Down	 Down	 7	 7
 Menu	 Menu	 8	 8
 Return	 Back	 9	 9
 Red	 Red	 0 / VCR	 0

 



 

 





 
 

 

 








Original	Sustituto	Original	Sustituto
i	INFO Info		
	MUTE Mute		
	CH + Ch +		
	CH - Ch -		
	VOL + Vol +		
	VOL - Vol -		
	SHIFT +  Power Shift + Power		
	SHIFT +  REC MODE Shift + Rec		
	SHIFT +  CH - Shift + Ch -		
	SHIFT +  CH + Shift + Ch +		
	<< <<		
	I<< I<<		
	>> >>		
	>>I >>I		
	Stop		
	Pause		
	PLAY MODE Play		



 



 

 





 











Original	Sustituto	Original	Sustituto
 Power DVD	 Power		
 Rec DVD	 Rec		
 Programme Down	 Ch -		
 Programme Up	 Ch +		
 I<< DVD	 I<<		
 << DVD	 <<		
 >>I DVD	 >>I		
 >> DVD	 >>		
 Stop DVD	 Stop		
 Pause/Step DVD	 Pause		
 Play DVD	 Play		







Original	Sustituto	Original	Sustituto
 VCR Power	 Power		
 VCR Rec	 Rec		
 VCR	 Ch -		
 VCR	 Ch +		
 VCR << / I<<	 <<		
 VCR << / I<<	 I<<		
 VCR >> / >>I	 >>		
 VCR >> / >>I	 >>I		
 VCR Stop	 Stop		
 VCR Pause / Step	 Pause		
 VCR Play	 Play		

