


















































































 















Original	Sustituto	Original	Sustituto
AVR Power On	 Power	OK	 OK
Mute	 Mute / Dimmer	Right	 Right
Play	 Play / Slow	Back/Exit	 Exit / Cancel / Clear
Pause	 Pause / Step / Freeze	Down	 Down
Stop	 Stop / Hold	Last	 Back / Return
<<	 << / Tune-	Vol+	 Vol+
>>	 >> / Tune+	AVR	 Smart / List
I<<	 I<< / Preset-	CH/Page Up	 CH+ / Page+
>>I	 >>I / Preset+	Vol-	 Vol-
Audio Effects	 Audio / Lang I/II	CH/Page Down	 CH- / Page-
Surround Modes	 Eject / Surround	1	 1
Video Modes	 Picture / Format	2	 2
Sleep	 Sleep / Timer	3	 3
Menu	 Menu / Home	4	 4
Up	 Up	5	 5
Info	 Info / Angle	6	 6
Left	 Left	7	 7

Original	Sustituto	Original	Sustituto
OK	 OK	OK	 OK
Right	 Right	Right	 Right
Back/Exit	 Exit / Cancel / Clear	Back/Exit	 Exit / Cancel / Clear
Down	 Down	Down	 Down
Last	 Back / Return	Last	 Back / Return
Vol+	 Vol+	Vol+	 Vol+
AVR	 Smart / List	AVR	 Smart / List
CH/Page Up	 CH+ / Page+	CH/Page Up	 CH+ / Page+
Vol-	 Vol-	Vol-	 Vol-
CH/Page Down	 CH- / Page-	CH/Page Down	 CH- / Page-
1	 1	1	 1
2	 2	2	 2
3	 3	3	 3
4	 4	4	 4
5	 5	5	 5
6	 6	6	 6
7	 7	7	 7




















Original	Sustituto	
8		8
9		9
0		0
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
AVR Power Off	 + 	Shift + Power
Tv	 + 	Shift + 1
Blu-ray	 + 	Shift + 2
DVR	 + 	Shift + 3
iPod	 + 	Shift + 4
Network	 + 	Shift + 5
Radio	 + 	Shift + 6
AUX	 + 	Shift + 7
Game	 + 	Shift + 8
Media Server	 + 	Shift + 9

Original	Sustituto	
Cable/Sat	 + 	Shift + 0







 















Original	Sustituto	Original	Sustituto
1	 1		
DVR	 Display / Media		
DVR Power On	 Power		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Menu	 Menu / Home		
Up	 Up		
Down	 Down		
Right	 Right		
Left	 Left		

Original	Sustituto	Original	Sustituto
Mute	 Mute / Dimmer		
Vol+	 Vol+		
Vol-	 Vol-		
CH/Page Up	 CH+ / Page+		
CH/Page Down	 CH- / Page-		





Original	Sustituto
Bluray Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
Disc Menu	 D.Menu / Top
Menu	 Menu / Home
Up	 Up
Left	 Left
OK	 OK
Right	 Right
Back/Exit	 Exit / Cancel / Clear

Original	Sustituto
Down	 Down
Last	 Back / Return
Vol+	 Vol+
Vol-	 Vol-
Blu-ray	 Display / Media
1	 1
2	 2
3	 3
4	 4
5	 5
6	 6
7	 7
8	 8
9	 9
0	 0
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat





Original	Sustituto
AVR Power On	Power
AVR Power Off	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Menu	Menu / Home
Back/Exit	Exit / Cancel / Clear
Last	Back / Return
Up	Up
Down	Down

Original	Sustituto
Right	Right
Left	Left
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
CH/Page Up	CH+ / Page+
CH/Page Down	CH- / Page-
Pause	Pause / Step / Freeze
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
<<	<< / Tune-



