


Original	Sustituto
	Mute / Dimmer
	Power
	TV/Radio /
	Audio / Lang I/II
	Sound / Title
	Back / Return
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / --

Original	Sustituto
	Smart / List
	Up
	CH+ / Page+
	Right
	Vol+
	Left
	Vol-
	OK
	Down
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Shift + Audio / Lang I/II
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Stop / Hold

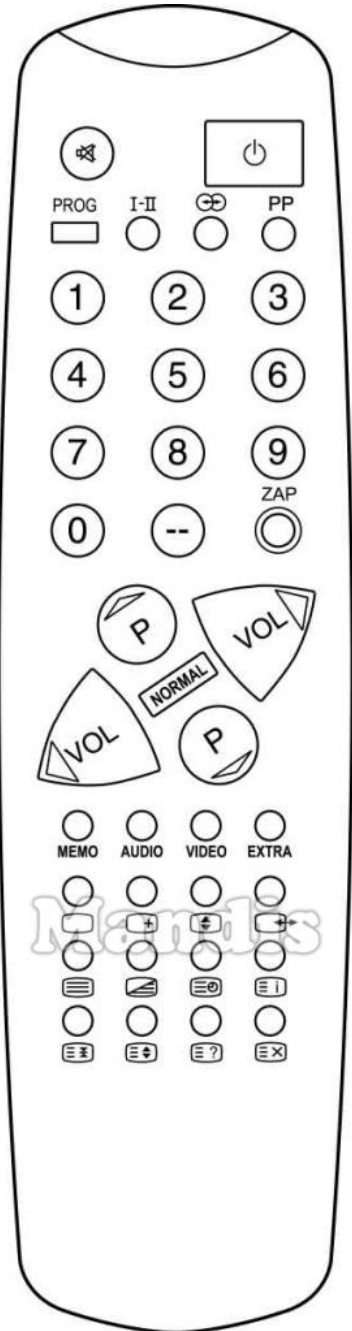



Original	Sustituto
----------	-----------

	[♦]	 OPT-TOOLS	Setup / OPT /
	[]↔	 TOP MENU	D.Menu / Top
	[≡]	 GOTO	Text / Goto
	[/≡]	+	Shift + Text /
	[≡⊕]	 EQ	Subtitle / EQ
	[≡ i]	 ANGLE	Info / Angle
	[≡□]	 II	Pause / Step / Freeze
	[≡♦]	 SIZE	Zoom / Size
	[≡?]	 RDS	AV / Input / RDS
	[≡X]	 CLEAR CANCEL	Exit / Cancel / Clear

Original	Sustituto
----------	-----------

