


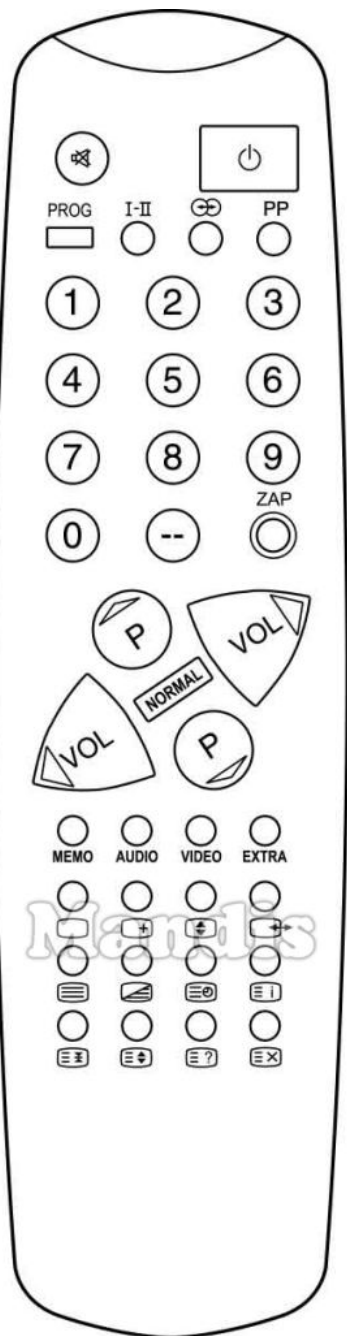

Original	Sustituto
	Mute / Dimmer
	Power
	TV/Radio /
	Audio / Lang I/II
	Sound / Title
	Back / Return
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / --

Original	Sustituto
	Smart / List
	Up
	CH+ / Page+
	Right
	Vol+
	Left
	Vol-
	OK
	Down
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Shift + Audio / Lang I/II
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Stop / Hold





Original	Sustituto	Original	Sustituto
[♦]	OPT-TOOLS SETUP Setup / OPT /		
[]↔	TOP MENU D.MENU D.Menu / Top		
[≡]	GOTO TEXT Text / Goto		
[/≡]	SHIFT + GOTO TEXT Shift + Text /		
[≡⊖]	EQ SUBTITLE Subtitle / EQ		
[≡ i]	ANGLE INFO Info / Angle		
[≡□]	STEP-FREEZE Pause / Step / Freeze		
[≡♦]	SIZE ZOOM Zoom / Size		
[≡?]	RDS AV INPUT AV / Input / RDS		
[≡X]	CLEAR EXIT Exit / Cancel / Clear		

Original	Sustituto

