



 


 
 
 

 

 
 



 

 

 
 
 
 
 
 

 
 

 

 
 


 
 










 

 
 
 
 
 
 
 
 
 

 

 
 






Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute
	PP		Pre Ch
	I-II		Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide
	P<P		Back
	Menu		Menu
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Sound		Red
	Green/Picture		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	TV		TV/R
	AV		AV
	[≡]		Text
	[/≡]		Media





Original	Sustituto	Original	Sustituto
	AD SUBT Subt		
	PICTURE FORMAT Format		
	SETTINGS OPT Options		
	ECO 3D 3D		
	HOME SMART Smart		
	CLEAR EXIT Exit		

