



 


 

 



 




 

 


 






 
 
 











 







Original	Sustituto	Original	Sustituto
 Power	 Power	 Left	 Left
 Open / Close	 Exit	 Enter	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Menu	 Menu
 4	 4	 Audio / RL	 Dual
 5	 5	 OSD	 Info
 6	 6	 Zoom	 Eject
 7	 7	 Subtitle	 Subt
 8	 8	 DVD / USB	 Media
 9	 9	 Play / Pause	 Play
 0	 0	 Stop	 Stop
 Vol-	 Vol -	 Repeat	 Text
 Vol+	 Vol +	 Angle	 Format
 Setup	 Options	 <<	 <<
 Search	 TV/R	 >>	 >>
 Up	 Up	 I<<	 I<<

Original	Sustituto	Original	Sustituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 Play	 Play
 Pause	 Pause	 Stop	 Stop
 <<<	 <<<	 >>>	 >>>
 >>>	 >>>	 I<<	 I<<
 I<<	 I<<	 <<<	 <<<
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	 AV
 TOP MENU	 DISPLAY	 INFO	 INFO
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 HOME	 SMART
 VOL+	 APP	 MEDIA	 CH-
 VOL-	 MEDIA	 CH+	 CH+
 1	 2	 3	 3
 4	 5	 6	 6
 7	 8	 9	 9
GUIDE	0	FAV	PRE-CH
A	B	C	D
www.mandis.tv			





Original	Sustituto	Original	Sustituto
	>>		>>

