



Original	Sustituto
Standby / On	Power
Sleep	Sleep / Timer
INPUT PREV.	CH- / Page-
INPUT NEXT	CH+ / Page+
NETWORK	Shift + 7
iPod / USB	Shift + 8
ADAPTER	Shift + 4
BD	Shift + 9
DVD	Shift + 2
DVR / BDR	Shift + 5
SAT / CBL	Shift + Fav / Marker / PC
GAME	Shift + Guide / EPG / -/-
HDMI	Shift + 0
CD	Shift + 3
TV	Shift + 1
TUNER	Shift + 6
Auto / Direct	Red / Netflix / Search

Original	Sustituto
ALC /	Green / APP / Repeat
Adv. Surr.	Yellow / YouTube / Repeat
ECO	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Up	Up
Tune+	Shift + >> /
Tools Menu	Setup / OPT /
Volume+	Vol+
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Right	Right
Preset+	Shift + >>I / Preset+
Down	Down
Tune-	Shift + << /
Volume-	Vol-
Home Menu	Menu / Home





Original	Sustituto	Original	Sustituto
	iPod Ctrl.	D.Menu / Top	
	PTY	Info / Angle	
	Return	Back / Return	
	BAND	TV/Radio /	
	Pause	Pause / Step / Freeze	
	Stop	Stop / Hold	
	Play	Play / Slow	
	Mute	Mute / Dimmer	
	I<<	I<< / Preset-	
	BASS DOWN	Shift + Down	
	>>I	>>I / Preset+	
	BASS UP	Shift + Up	
	<<	<< / Tune-	
	TREBLE DOWN	Shift + Left	
	>>	>> / Tune+	
	TREBLE UP	Shift + Right	
	1	1	

Original	Sustituto	Original	Sustituto
	PHASE	Subtitle / EQ	
	2	2	
	3	3	
	Signal Sel.	Guide / EPG / -/-	
	DISP	Display / Media	
	4	4	
	Auto S.RTRV	Sound / Title	
	5	5	
	SB CH	Eject / Surround	
	6	6	
	CHANNEL	Smart / List	
	Repeat	Shift + Green / APP /	
	7	7	
	Midnight	Picture / Format	
	Speakers	Zoom / Size	
	8	8	
	9	9	





Original	Sustituto	Original	Sustituto	
	CHANNEL LEVEL		+	Shift + CH+ /
	Shuffle		+	Shift + Blue / Prime
	Dimmer		+	Shift + Mute / Dimmer
	0		0	
	+ Favorite		Fav / Marker / PC	
	CHANNEL LEVEL		+	Shift + CH- /

