 



 

















 












Original	Sustituto
	 Power
	 TV/Radio /
	 Subtitle / EQ
	 Audio / Lang I/II
	 Zoom / Size
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0

Original	Sustituto
	 Picture / Format
	 Vol+
	 Fav / Marker / PC
	 CH+ / Page+
	 Vol-
	 Guide / EPG / -/--
	 CH- / Page-
	 Mute / Dimmer
	 Text / Goto
	 Info / Angle
	 Setup / OPT /
	 Menu / Home
	 Up
	 D.Menu / Top
	 Left
	 OK
	 Right





Original	Sustituto
 Back	 Back / Return
 Down	 Down
 EXit	 Exit / Cancel / Clear
 Simplink	 Display / Media
 TV/PC	 Shift + Fav / Marker / PC
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow/Bright-	 Yellow / YouTube / Repeat
 Blue/Bright+	 Blue / Prime Video / Random

Original	Sustituto

