



Original	Sustituto
Record / OTR	Rec / Rec Mode
Standby	Power
Select	Smart / List
Timer	Sleep / Timer
Clear	Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Monitor	Display / Media
0	0
OK	OK

Original	Sustituto
P-	CH- / Page-
P+	CH+ / Page+
Play	Play / Slow
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Index	Info / Angle
SP/LP	D.Menu / Top
Still	Pause / Step / Freeze
TV Vol+	Shift + Vol+
System	Menu / Home
TV CH+	Shift + CH+ /
TV Vol-	Shift + Vol-
TV Power	Shift + Power
TV CH-	Shift + CH- /

