



























 














 

















 



 
 


Original	Sustituto
 Aper / Chiuso	 Eject / Surround
 Video / Y	 AV / Input / RDS
 Power	 Power
 OSD	 Display / Media
 PBC	 D.Menu / Top
 Titolo	 Sound / Title
 Menu	 Menu / Home
 Ricerca	 Red / Netflix / Search
 1	 1
 2	 2
 3	 3
 Repeticione	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6
 A-B RPT	 Yellow / YouTube / Repeat
 7	 7

Original	Sustituto
 8	 8
 9	 9
 Prog	 TV/Radio /
 Intro	 Smart / List
 0	 0
 10+	 Guide / EPG / -/-
 Pausa	 Pause / Step / Freeze
 Info / Play	 Play / Slow
 Info / Play	 Info / Angle
 Up	 Up
 Left	 Left
 Setup	 Setup / OPT /
 Right	 Right
 Ritorno	 Back / Return
 Down	 Down
 Stop	 Stop / Hold
 <I Ralent	 CH- / Page-





	Original	Sustituto	
	Ralent I>	 CH+ / Page+	
	<< F.REV	 TUNE- << / Tune-	
	>> F.FWD	 TUNE+ >> / Tune+	
	Step	 SHIFT +  Shift + Pause / Step /	
	Zoom	 SIZE ZOOM Zoom / Size	
	I<< Prec	 PRESET- I<< / Preset-	
	>>I Succ	 PRESET+ >>I / Preset+	
	Sottotitoli	 EQ SUBTITLE Subtitle / EQ	
	NTSC/PAL	 FORMAT PICTURE Picture / Format	
	Volume-	 VOL - Vol-	
	Volume+	 VOL + Vol+	
		 TIMER SLEEP Sleep / Timer	
	Track	 GOTO TEXT Text / Goto	
	Audio	 LANG I/II AUDIO Audio / Lang I/II	
	Muto	 DIMMER MUTE Mute / Dimmer	

Original	Sustituto

