



Original	Sustituto
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Shift + Guide / EPG / -/-
Recall	Back / Return
Vol+	Vol+
I/II/Audio	Audio / Lang I/II
Auto	Smart / List

Original	Sustituto
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
Up	Up
Left	Left
OK/Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Size	Zoom / Size
Play/Pause / Size	Play / Slow





	Original	Sustituto		Sustituto
	SIZE Play/Pause / Size	STEP-FREEZE Pause / Step / Freeze		
	HOLD Stop/Hold	HOLD Stop / Hold		
	TEXT Text	GOTO TEXT Text / Goto		
	SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ		
	INDEX <</Index	TUNE- << / Tune-		
	REVEAL >>/Reveal	TUNE+ >> / Tune+		
	SUBPAGE <</Subpage	PRESET- << / Preset-		
	FAV >> /FAV	PRESET+ >> / Preset+		
	FAV >> /FAV	PC FAV MARKER Fav / Marker / PC		
	MEDIA Media	SHIFT + MEDIA DISPLAY Shift + Display / Media		
	REC Rec	REC MODE Rec / Rec Mode		
	EPG EPG	GUIDE EPG Guide / EPG / -/-		
	TVRADIO Tv/Radio	PROGRAM TV/ RADIO TV/Radio /		
	Red Red	NETFLIX SEARCH Red / Netflix / Search		
	Green Green	APP REPEAT Green / APP / Repeat		
	Yellow Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
	Blue Blue	Prime Video RANDOM Blue / Prime Video / Random		

Original	Sustituto	Original	Sustituto

