




 









 




 

 

 











Original	Sustituto
 Power	 Power
 Contrast	 Options
 Audio	 Shift + Dual
 O<->O	 TV/R
 Input	 AV
 I+	 Info
 Timer	 Shift + AV
 I / II	 Dual
 Red / Text	 Red
 Green / Subtitle	 Green
 Green / Subtitle	 Subt
 Yellow / PIP Swap / A/B	 Yellow
 Blue	 Blue
 Picture	 Menu
 Recall	 Pre Ch
 Up / P +	 Up
 Up / P +	 Ch +

Original	Sustituto
 Down / P -	 Down
 Down / P -	 Ch -
 Right / Vol +	 Right
 Right / Vol +	 Vol +
 Left / Vol -	 Left
 Left / Vol -	 Vol -
 OK	 Ok
 Mute	 Mute
 Aspect	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original		Sustituto		Original		Sustituto	
	9		9				
	0		0				
	Text		Text				
	PIP		D. Menu				
	Freeze		Stop				
	Cancel		Back				
	List		List				
	Text Cancel		Exit				
	Text Hold		Pause				
	Text Index		Guide				
	Text Size		3D				
	Text Reveal		Shift + Options				
	Mix		Shift + Text				

