












 


 
















 



 

 



 









 



 

 

| Original   | Sustituto   |
|--|---|
|  Power    |  Power               |
|  Mute     |  Mute / Dimmer       |
|  1        |  1                   |
|  2        |  2                   |
|  3        |  3                   |
|  4        |  4                   |
|  5        |  5                   |
|  6        |  6                   |
|  7        |  7                   |
|  8        |  8                   |
|  9       |  9                  |
|  Text   |  Text / Goto       |
|  0      |  0                 |
|  Recall |  Back / Return     |
|  Imagen |  Picture / Format  |
|  Sonido |  Sound / Title     |
|  Audio  |  Audio / Lang I/II |

| Original  | Sustituto  |
|---|--|
|  Sleep   |  Sleep / Timer                |
|  Fuente  |  Shift + Subtitle / EQ        |
|  P+      |  CH+ / Page+                  |
|  Vol+    |  Vol+                         |
|  Info    |  Info / Angle                 |
|  P-      |  CH- / Page-                  |
|  Vol-    |  Vol-                         |
|  Red     |  Red / Netflix / Search       |
|  Green   |  Green / APP / Repeat         |
|  Yellow  |  Yellow / YouTube / Repeat    |
|  Blue   |  Blue / Prime Video / Random |
|  Up    |  Up                         |
|  Left  |  Left                       |
|  OK    |  OK                         |
|  Right |  Right                      |
|  Menu  |  Menu / Home                |
|  Down  |  Down                       |





| Original   | Sustituto   |
|--|---|
|  Salir          |  Exit / Cancel / Clear |
|  Subtitulo      |  Subtitle / EQ         |
|  Indice         |  D.Menu / Top          |
|  Tamaño         |  Zoom / Size           |
|  Mostrar        |  AV / Input / RDS      |
|  Mezclar        |  Setup / OPT /         |
|  Play           |  Play / Slow           |
|  Pause/Congelar |  Pause / Step / Freeze |
|  I<</Cancelar   |  I<< / Preset-         |
|  >>I/Subpag     |  >>I / Preset+         |
|  Guía          |  Shift + Menu /       |
|  FAV          |  Fav / Marker / PC   |
|  Stop         |  Stop / Hold         |
|  <</FAV-      |  << / Tune-          |
|  >>/FAV+      |  >> / Tune+          |
|  USB          |  Shift + 8           |
|  Grabar       |  Rec / Rec Mode      |

| Original  | Sustituto   |
|---|---|
|  Timeshift |  Shift + Sleep / Timer |
|  Tv/Radio  |  TV/Radio /            |

