









Original		Sustituto		Original		Sustituto	
	Power		Power		4		4
	VIDEO		Red / Netflix / Search		5		5
	Sleep		Sleep / Timer		6		6
	Tuner Band		TV/Radio /		7		7
	P.Call Down		Shift + Down		8		8
	P.Call Up		Shift + Up		9		9
	Changer CD 1		Shift + 1		0		0
	Changer CD 2		Shift + 2		+10		Guide / EPG / -/-
	Changer CD 3		Shift + 7		I<<		I<< / Preset-
	Changer CD 4		Shift + 4		>>I		>>I / Preset+
	Changer CD 5		Shift + 8		Stop		Stop / Hold
	Changer CD 6		Shift + 9		Play/Pause		Play / Slow
	P		OK		Repeat		Green / APP / Repeat
	P.Open/Close		Eject / Surround		Clear		Exit / Cancel / Clear
	1		1		Check		Shift + OK
	2		2		Edit		Text / Goto
	3		3		P.Mode		Picture / Format





Original	Sustituto
 AI Auto Focus	 Info / Angle
 Up	 Up
Presence	 Setup / OPT /
 AI/Loudness	 Audio / Lang I/II
Left	 Left
EQ.Effect	 D.Menu / Top
Right	 Right
 Off	 Shift + Mute / Dimmer
 M.Call	 Back / Return
 Down	 Down
 Display	 Display / Media
 S.W.Power	 Shift + Power
 S.W.Effect	 Shift + D.Menu / Top Menu
 S.W.Vol-	 Shift + Vol-
 S.W.Vol+	 Shift + Vol+
 Mute	 Mute / Dimmer
 LD/AUX	 AV / Input / RDS

Original	Sustituto
 Tape	 Shift + 5
 Tuner	 Shift + 6
 CD	 Shift + 3
 Volume Control -	 Vol-
 Volume Control +	 Vol+














 
 
 




Original	Sustituto	Original	Sustituto
Power ON/Off		Power	
Mute		Mute / Dimmer	
CD Play		Play / Slow	
CD Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
CD Rewind		<< / Tune-	
CD F.FWD		>> / Tune+	
Prev./Prog-		<< / Preset-	
Next/Prog+		>> / Preset+	
Tape 2 Pre./eq		Subtitle / EQ	
Fm Mode/Disc		Eject / Surround	
Edit		Zoom / Size	
Sleep		Sleep / Timer	
Program		TV/Radio /	
Every Pop		D.Menu / Top	
Funct./Direct		Setup / OPT /	
Woofers/Speed		Text / Goto	

Original	Sustituto	Original	Sustituto
Input/Source		AV / Input / RDS	
Mode		Menu / Home	
Tape 1 Preset		Up	
CD/Theater		Info / Angle	
Tape 1 Hall/Ats		Left	
Center		OK	
Tape 2 REC./Jazz		Right	
Clear		Exit / Cancel / Clear	
Preset Pause		Down	
Volume+		Vol+	
Band		Smart / List	
Vol Rs+/S.Mode		CH+ / Page+	
Volume-		Vol-	
Display		Display / Media	
Vol Rs-/Effect		CH- / Page-	
Pr 1		1	
Pr 2		2	





Original	Sustituto	Original	Sustituto
Pr 3	 3		
Pr 4	 4		
Pr 5	 5		
Pr 6	 6		
Pr 7	 7		
Pr 8	 8		
Pr 9	 9		
+10/Next Sv+V	 Guide / EPG / -/--		
Pr 0/10	 0		
Repeat	 Green / APP / Repeat		
CD Random	 Blue / Prime Video / Random		
Tape 1 Play	 Shift + Play /		
Tape 1 Stop	 Shift + Stop /		
Tape 1 Rec	 Shift + Rec / Rec Mode		
Tape 1 Rew	 Shift + << /		
Tape 1 F.FWD	 Shift + >> /		

