



 


 

 



 




 

 


 






 
 
 











 







Original	Sustituto	Original	Sustituto
 Power	 Power	 Left	 Left
 Open / Close	 Exit	 Enter	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Menu	 Menu
 4	 4	 Audio / RL	 Dual
 5	 5	 OSD	 Info
 6	 6	 Zoom	 Eject
 7	 7	 Subtitle	 Subt
 8	 8	 DVD / USB	 Media
 9	 9	 Play / Pause	 Play
 0	 0	 Stop	 Stop
 Vol-	 Vol -	 Repeat	 Text
 Vol+	 Vol +	 Angle	 Format
 Setup	 Options	 <<	 <<
 Search	 TV/R	 >>	 >>
 Up	 Up	 I<<	 I<<



Original	Sustituto	Original	Sustituto
 MUTE		 TV	 AUX
 DVD	 SAT	 PLAY MODE	 REC MODE
 SOUND	 AD	 DISC NAV	 SETTINGS
 LIST	 SUBT	 PROG	 ECO
 SLEEP	 TV/R	 E-MANUAL	 TIMER
 D.MENU	 TEXT	 MENU	 AV
 TOP MENU	 MENU	 TOP MENU	 DISPLAY
 SOUND	 DUAL	 MENU	 INFO
 DISPLAY	 INFO	 OK	 RETURN
 ZOOM	 ZOOM	 CLEAR	 BACK
 AD	 SUBT	 EXIT	 HOME
 APP	 MEDIA	 VOL+	 SMART
 APP	 MEDIA	 VOL-	 APP
 PLAY MODE	 PLAY	 CH+	 MEDIA
 PLAY	 PLAY	 CH-	 1
 STOP	 STOP	 2	 3
 REPEAT	 TEXT	 4	 5
 ANGLE	 FORMAT	 5	 6
 <<	 <<	 6	 7
 >>	 >>	 7	 8
 I<<	 I<<	8	 9
		9	 0
		0	FAV
		GUIDE	PRE-CH
		A	B
		C	D





Original

Sustituto

Original	Sustituto
	
>>	>>

Original

Sustituto

Original	Sustituto

