 

 

 

 

 

 

 

 

 

 

 

 

 

 

 











 











 















 


 
 



 

 
 


 




Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	EPG		Guide / EPG / -/-
	Settings		Setup / OPT /
	Input		AV / Input / RDS
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Menu		Menu / Home
	NETFLIX		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Google Play		Shift + Green / APP /
	Vol+		Vol+
	Google Assistant		Smart / List
	P+		CH+ / Page+
	Vol-		Vol-
	Home		D.Menu / Top
	Home		Display / Media
	P-		CH- / Page-





Original	Sustituto
 Text	 Text / Goto
 USB	 Shift + 8
 I/II	 Audio / Lang I/II
 Subt	 Subtitle / EQ
 Play / Text Mix	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop / Text Hold	 Stop / Hold
 Text Size	 Zoom / Size
 << / Text	 << / Tune-
 I<< / Text Index	 I<< / Preset-
 >>I / Text Reveal	 >>I / Preset+
 >> / Text Cancel	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Sustituto

