



Original	Sustituto	Original	Sustituto
Power	Power	>>	>> / Preset+
Function Tv	AV / Input / RDS	<<	<< / Tune-
Eject	Eject / Surround	>>	>> / Tune+
Sleep	Sleep / Timer	Stop	Stop / Hold
1/RDS Display	1	Play	Play / Slow
2	2	Pause	Pause / Step / Freeze
3/TA	3	Vol+	Vol+
4/PTY-	4	Mute	Mute / Dimmer
5/PTY Search	5	Tuning/CH+	Shift + >> /
6/PTY+	6	Tuning/CH+	CH+ / Page+
7	7	Vol-	Vol-
8	8	Repeat	Shift + Green / APP /
9	9	Tuning/CH-	CH- / Page-
PL II	Audio / Lang I/II	Tuning/CH-	Shift + << /
0	0	Disc Menu	D.Menu / Top
DSP/EQ	Subtitle / EQ	Menu	Menu / Home
I<<	I<< / Preset-	Title Menu	Sound / Title









 



















 











 



 

 

 











 







Original	Sustituto
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green/Tuner	Green / APP / Repeat
Yellow/MO/ST	Yellow / YouTube / Repeat
Blue/CD Ripping	Blue / Prime Video / Random
Dimmer	+ Shift + Mute / Dimmer
S.Vol	Smart / List
P.Bass/Audio Upscale	Display / Media

Original	Sustituto





Original	Sustituto
 Power	 Power
 Function Tv	 AV / Input / RDS
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Stop	 Stop / Hold
 Play	 Play / Slow

Original	Sustituto
 Pause	 Pause / Step / Freeze
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search





Original	Sustituto
TUNER MEMORY B	Green APP REPEAT
MO/ST C	Yellow YouTube REPEAT A-B
CDRIPPING D	Blue Prime Video RANDOM

Original	Sustituto

