 

 


 

 

 
 


 

 
 
 


 
 

 



 
 
 

 
 





Original	Sustituto
 Power	 Power
 Input	 AV
 Digital/Analog	 Options
 Tv/Radio	 TV/R
 Exit	 Exit
 Ext.Box Menu	 D. Menu
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]/[?]	 Info

Original	Sustituto
 [≡]	 Text
 Google Play	 Media
 Netflix	 Shift + Smart
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Guide	 Guide
 Action Menu	 Menu
 Back	 Back
 APPS	 Shift + Media
 TV	 3D
 Home	 Smart
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Sustituto		
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Recall		Pre Ch
	Prog+		Ch +
	Prog-		Ch -
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Rec		Rec
	Stop		Stop
	Title List		List
	Audio		Dual

Original	Sustituto		
	[...]		Subt
	Help		Format

