 


 







 
 
 
 
 
 
 
 

 

 
 
 
 
 











Original		Sustituto		Original		Sustituto	
	Power		Power		Pause / Zoom		Pause
	16:9 Wide		Format		Pause / Zoom		Eject
	Red		Red		Stop / Reveal		Stop
	Green / Subtitle		Green		Back / TTX		Back
	Green / Subtitle		Subt		Back / TTX		Text
	Yellow / FAV		Yellow		Info		Info
	Yellow / FAV		Shift + Pre Ch		Rec		Rec
	Blue / EPG		Blue		L / R		Shift + Dual
	Blue / EPG		Shift + Guide		Smart S		Smart
	I<< / Hold		I<<		Up		Up
	>>I / List		List		Right		Right
	>>I / List		>>I		Down		Down
	<< / Language		Dual		Left		Left
	<< / Language		<<		OK		Ok
	>> / Radio		>>		Source		AV
	>> / Radio		TV/R		Menu		Menu
	Play / Index		Play		Vol +		Vol +





Original		Sustituto		Original	Sustituto
	Vol -		Vol -		
	F1		Media		
	Mute		Mute		
	CH +		Ch +		
	CH -		Ch -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Recall		Pre Ch		
	Guide		Guide		

