










 





 







 





 








 










 

 

 
 
 

 












Original	Sustituto	Original	Sustituto
	Power		Power
	Input		AV
	TV		TV/R
	Quick		Media
	List		Smart
	List		List
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	AD		Shift + Subt
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Recall		Pre Ch
	Guide		Guide
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original		Sustituto		Original		Sustituto	
	0		0		[>]	+	Shift + Text
	[i+]/[≡i]		Info		-[/≡]-	+	Shift + Format
	Back		Back		3D		3D
	<<		<<		O)/I		Dual
	[≡+]		Format		More Info	+	Shift + Info
	Play		Play		[<>]	+	Shift + 3D
	>>		>>		Subtitle		Subt
	<<		<<				
	[≡◆]		Eject				
	[≡?]		Options				
	Stop		Stop				
	>>I		>>I				
	[O]/[≡X]		D. Menu				
	Nothing	+	Shift + Options				
	Pause/II>		Pause				
	Text		Text				
	[▼]		Sleep				

