



 
 
 


 


 


 
Original	Sustituto
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Shift + Guide
SUBTL	Subt
EPG	Guide
Menu	Menu
Vol +	Vol +

Original	Sustituto
Vol -	Vol -
CH +	Ch +
CH -	Ch -
Exit	Exit
Red / USB Left	Red
Red / USB Left	Shift + Left
Green / USB	Green
Green / USB	Shift + Down
Yellow / USB Up	Yellow
Yellow / USB Up	Shift + Up
Blue / USB Right	Blue
Blue / USB Right	Shift + Right
Up	Up
Left	Left
Enter	Ok
Right	Right
Down	Down





 

 
 


 
 
 
 
 

 
 


 



 
 




 
 



 

Original	Sustituto
 QV	 Options
 FAV	 Pre Ch
 Source	 AV
 Sleep	 Sleep
 Picture	 Shift + Format
 Sound	 Shift + Dual
 Display	 Info
 I/II / Top	 Dual
 FAV - / REV	 <<
 FAV + / FWD	 >>
 USR/CR / Text	 Media
 USR/CR / Text	 Text
 Play/Pause / Index	 Play
 Play/Pause / Index	 Shift + Info
 Play/Pause / Index	 Pause
 Stop / Cancel	 Stop
 Stop / Cancel	 Shift + Exit

Original	Sustituto
 Size	 Format
 Prog / Mix	 Smart
 Prog / Mix	 Shift + Sleep
 Return / SUBPG	 Back
 Repeat / Reveal	 Shift + Back
 Search / Hold	 TV/R





Original	Sustituto	
		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Original	Sustituto	
		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

