



 



 







 




 
 












 



 
































Original		Recharge		Original		Recharge	
	Power		Power		[≡]		Text / Goto
	Screen		Picture / Format		9		9
	Lang		Audio / Lang I/II		0		0
	Subtitle		Subtitle / EQ		Recall		Back / Return
	World		Smart / List		Up		Up
	Red/↑		Red / Netflix / Search		Menu		Menu / Home
	Green/↓		Green / APP / Repeat		Right		Right
	Yellow		Yellow / YouTube / Repeat		Left		Left
	Blue		Blue / Prime Video / Random		Return		Shift + Back / Return
	1		1		Return		Exit / Cancel / Clear
	2		2		Down		Down
	3		3		OK		OK
	4		4		Source		AV / Input / RDS
	5		5		FAV		Fav / Marker / PC
	6		6		Presets		Display / Media
	7		7		Sleep		Sleep / Timer
	8		8		Vol+		Vol+





	Original	Recharge		Original	Recharge
	PR+	 CH+ / Page+			
	Info	 Info / Angle			
	Mute	 Mute / Dimmer			
	EPG	 Guide / EPG / -/--			
	Vol-	 Vol-			
	PR-	 CH- / Page-			

