





 



 
 









 





 

 
 



 







 


 





 
















 

 




 

 







Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute / Dimmer		5		5
	Play		Play / Slow		6		6
	Pause [/≡]		Pause / Step / Freeze		7		7
	Stop/[≡+]		Stop / Hold		8		8
	Rec/[≡◆]		Rec / Rec Mode		9		9
	<</[≡o]		<< / Tune-		*		Setup / OPT /
	<</[≡i]		<< / Preset-		0		0
	>> /[≡?]		>> / Preset+		[→]		Shift + Right
	>> /[≡x]		>> / Tune+		Up		Up
	Info		Info / Angle		Left		Left
	O)/II/Audio		Audio / Lang I/II		OK		OK
	[≡]		Text / Goto		Right		Right
	←/<x]		Shift + Left		Down		Down
	1		1		Netflix		Shift + Red / Netflix /
	2		2		YouTube		Shift + Yellow / YouTube /
	3		3		Vol+		Vol+





Original	Recharge
 Home/Source	 Menu / Home
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / --
 List	 Smart / List
 Q.Menu	 D.Menu / Top

Original	Recharge





Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute / Dimmer		5		5
	Play		Play / Slow		6		6
	Pause/[≡]		Pause / Step / Freeze		7		7
	Stop/[≡+]		Stop / Hold		8		8
	Rec/[≡◆]		Rec / Rec Mode		9		9
	<</[≡o]		<< / Tune-		*		Setup / OPT /
	<</[≡i]		<< / Preset-		0		0
	>> /[≡?]		>> / Preset+		[→]		Shift + Right
	>> /[≡x]		>> / Tune+		Up		Up
	Info		Info / Angle		Left		Left
	OI/II/Audio		Audio / Lang I/II		OK		OK
	[≡]		Text / Goto		Right		Right
	←/<x]		Shift + Left		Down		Down
	1		1		Netflix		Shift + Red / Netflix /
	2		2		You Tube		Shift + Yellow / YouTube /
	3		3		Vol+		Vol+





Original		Recharge		Original		Recharge	
	Home / Source		Menu / Home				
	P+		CH+ / Page+				
	Vol-		Vol-				
	P-		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	EPG		Guide / EPG / -/--				
	List		Smart / List				
	Q.Menu		D.Menu / Top				

