




 

 
 
 
 




 



 

 

 

 


 




 
 







Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Mute		Mute		Menu		Menu
	FAV		Pre Ch		Exit		Exit
	Subtitle		Subt		Up		Up
	Info		Info		Left		Left
	TTX		Text		OK		Ok
	Recall		Back		Right		Right
	List		List		Down		Down
	1		1		EPG		Guide
	2		2		Vol +		Vol +
	3		3		Vol -		Vol -
	4		4		Timer		AV
	5		5		Pg Dn		Shift + Ch -
	6		6		Pg Up		Shift + Ch +
	7		7		<<		<<
	8		8		>>		>>
	9		9		I<<		I<<







 






 

 

 



 
 
 
 


 
 




 




Original	Recharge
>>I	>>I
CH +	Ch +
CH -	Ch -
Play	Play
Pause	Pause
Stop	Stop
Audio	Dual
PAL / NTSC	3D
Sleep	Sleep
TV / Radio	TV/R
Red	Red
Aspect	Format
Green	Green
Yellow	Yellow
Blue	Blue

Original	Recharge





Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Mute		Mute		Menu		Menu
	FAV		Pre Ch		Exit		Exit
	Subtitle		Subt		Up		Up
	Info		Info		Left		Left
	TTX		Text		OK		Ok
	Recall		Back		Right		Right
	List		List		Down		Down
	1		1		EPG		Guide
	2		2		Vol +		Vol +
	3		3		Vol -		Vol -
	4		4		Timer		AV
	5		5		Pg Dn		Shift + Ch -
	6		6		Pg Up		Shift + Ch +
	7		7		<<		<<
	8		8		>>		>>
	9		9		I<<		I<<




 

 
 

 








 
 



 
 
 









Original	Recharge	Original	Recharge
 >>I	 >>I		
 CH +	 Ch +		
 CH -	 Ch -		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Audio	 Dual		
 PAL / NTSC	 3D		
 Sleep	 Sleep		
 TV / Radio	 TV/R		
 Red	 Red		
 Aspect	 Format		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

Original	Recharge	Original	Recharge





Original	Recharge	
Power		Power
Mute		Mute
FAV		Pre Ch
Subtitle		Subt
Info		Info
TTX		Text
List		List
Recall		Back
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9

Original	Recharge	
0		0
Menu		Menu
Exit		Exit
EPG		Guide
Swap		Media
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Vol+		Vol +
Vol-		Vol -
Pg Up		Shift + Up
PG Dn		Shift + Down
CH+		Ch +
CH-		Ch -
>>		>>





Original	Recharge	Original	Recharge
<<		<<	
>>		>>	
I<<		I<<	
Play		Play	
Pause/Timeshift		Pause	
Stop		Stop	
Rec		Rec	
Audio		Dual	
M/P		Smart	
Tv/Radio		TV/R	
A-B		Options	
Red/Zoom		Red	
Green/Aspect		Green	
Yellow/V-Formet		Yellow	
Blue/Timer		Blue	

