


 





 
 

 
 
 


 

 





 


 







 
 
 
 
 
 
 
 

 











	Original	Recharge		Original	Recharge
	Power		Power		0
	Mute		Mute		I>
	★		Pre Ch		Back
	Tools		Options		<<
	TV		TV/R		>>
	θ		3D		Play / Pause
	A-B		Shift + Play		Pause
	(8)		Media		Stop
	1		1		I<<
	2		2		>>I
	3		3		Vol -
	4		4		Vol +
	5		5		Home
	6		6		Smart
	7		7		Repeat
	8		8		Shift + Text
	9		9		Up
					Left
					Enter
					Ok



