


 









 







 

 

 



 

 



 

 



 
 

 
 

 

 

 



 
 



 
 



 






Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Volume Up		Vol +		CD		Yellow
	Volume Down		Vol -		+10		Guide
	Sleep		Sleep		Tape		Blue
	Timer Standby		Shift + Power		Video1/DAT		Smart
	Band		Green		Video 2/AUX		Media
	Mono Tuner		TV/R		DSP		3D
	Mode Display		Info		PRGM/Test		Menu
	1		1		GEQ		Back
	2		2		Manual/Mode		Pre Ch
	3		3		Mute		Mute
	4		4		Volume Select		Dual
	5		5		Up		Up
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Direct		Options




 



















 



 



 

 



 

 

 

 



 

















 






Original		Rechange		Original		Rechange	
	Karaoke		Subt				
	AI Function		Text				
	T-Bass		AV				
	Dolby Pro Logic		Format				
	BBE		Red				
	PRGM Band		Shift + Menu				




 



 

 

 
 
 


 
 


 



Original	Rechange	Original	Rechange
 Power	 Power	 3	 3
 Volume Up	 Vol +	 4	 4
 Volume Down	 Vol -	 5	 5
 Mute	 Mute	 6	 6
 Band	 Green	 7	 7
 CD	 Yellow	 8	 8
 Tape	 Blue	 9	 9
 Video1/DAT	 Smart	 0	 0
 Video2/AUX	 Media	 +10	 Guide
 Repeat	 Text	 PRGM CD	 Menu
 Random	 AV	 Play/Pause	 Play
 Disc Skip	 Info	 Stop/Clear	 Stop
 Disc Direct Play 1	 Shift + 1	 Search/Check	 >>
 Disc Direct Play 2	 Shift + 2	 <<	 <<
 Disc Direct Play 3	 Shift + 3	 Edit AI	 Format
 1	 1	 Edit PRGM	 3D
 2	 2	 <> Deck 1	 Pause





Original	Recharge
 Power	 Power
 Volume Up	 Vol +
 Volume Down	 Vol -
 Mute	 Mute
 Band	 Green
 CD	 Yellow
 Tape	 Blue
 Video1/DAT	 Smart
 Video2/AUX	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Recharge
 9	 9
 0	 0
 +10	 Guide
 PRGM DAT	 Menu
 <> Deck 2	 Play
 Stop Deck 2	 Stop
 >> Deck 2	 >>
 << Deck 2	 <<
 Rec/Rec Mute	 Rec
 Pause	 Pause

