 


 
 



 
 


 



 


 
 



 







 






 
 
 

 


 

 

 
 







 
 
 










Original	Rechange	Original	Rechange
Operate	Power	C.Reset/Cancel	Exit
Store	Smart	Start+	Vol +
CH Set	Media	Timer	AV
Review	Guide	Start-	Vol -
Clock	Back	Stop+	Up
C.Memory/Display	Info	Stop-	Down
Mode	Format	Date+	Right
1	1	Date-	Left
2	2	Tv Prog+/Up	Ch +
3	3	Tv Prog-/Down	Ch -
4	4	'/'	Dual
5	5	AudioMonitor	Mute
6	6	Tv/Video	TV/R
7	7	<<	<<
8	8	Play	Play
9	9	>>	>>
0	0	Rec	Rec





Original	Rechange	Original	Rechange
 Operate	 Power	 C.Reset/Cancel	 Exit
 Store	 Smart	 Timer	 AV
 CH Set	 Media	 Start+	 Vol +
 Review	 Guide	 Start-	 Vol -
 Clock	 Back	 Stop+	 Up
 C.Memory Display	 Info	 Stop-	 Down
 Mode	 Format	 Date+	 Right
 1	 1	 Date-	 Left
 2	 2	 Tv Prog+/Up	 Ch +
 3	 3	 Tv Prog-/Down	 Ch -
 4	 4	 '/''	 Dual
 5	 5	 Audio/Monitor	 Mute
 6	 6	 Tv/Video	 TV/R
 7	 7	 <<	 <<
 8	 8	 Play	 Play
 9	 9	 >>	 >>
 0	 0	 Rec	 Rec



