



Original	Rechange
Power Receiver	Power
BD	1
DVD	2
DVR / BDR	5
HDMI	0
TV	TV/Radio /
CD	3
NET	7
ADAPTER	Eject / Surround
iPod USB	8
Tuner	6
Video	4
CD-R	9
Input Select	Shift + Left
Input Select ~	Shift + Right
Master Volume	Vol+
Master Volume	Vol-

Original	Rechange
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Preset +	Shift + >>I / Preset+
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /





Original	Rechange	Original	Rechange
Down	Down	Stop	Stop / Hold
Return	Back / Return	>>I	>>I / Preset+
Auto / Alc / Direct	Info / Angle	1 Tuner	Shift + 1
Stereo	Sound / Title	2 Tuner	Shift + 2
Repeat	Green / APP / Repeat	3 Tuner	Shift + 3
Standard	Shift + Smart / List	Audio DVD	Shift + Audio / Lang I/II
Random	Blue / Prime Video / Random	4 Tuner	Shift + 4
Adv. Surr.	Guide / EPG / -/-	Signal Sel	Shift + Setup / OPT / Tools
<<	<< / Tune-	MCACC	Fav / Marker / PC
Phase CTRL	Red / Netflix / Search	5 Tuner	Shift + 5
Play	Play / Slow	6 Tuner	Shift + 6
>>	>> / Tune+	Sleep	Sleep / Timer
Status	Exit / Cancel / Clear	Disp	Display / Media
I<<	I<< / Preset-	7 Tuner	Shift + 7
Pause	Pause / Step / Freeze	CH Level	Shift + CH+ /
MPX	Zoom / Size	8 Tuner	Shift + 8
PQLS	Shift + Menu / Home	A.ATT.	Yellow / YouTube / Repeat



























 

 



 

 







 





 

 

 

 





Original	Rechange
DIMMER 9	SHIFT + 9 = Shift + 9
DIMMER 9	SHIFT + DIMMER MUTE = Shift + Mute / Dimmer
CH +	+ CH PAGE = CH+ / Page+
D.ACCESS CLR	SHIFT + TOP MENU D.MENU = Shift + D.Menu / Top Menu
0	SHIFT + 0 = Shift + 0
CLASS ENTER	SHIFT + MEDIA DISPLAY = Shift + Display / Media
CLASS ENTER	SHIFT + OK = Shift + OK
CH -	CH PAGE - = CH- / Page-

Original	Rechange





 

















 











 

 



 

 


 
 



 

 















Original		Rechange		Original		Rechange	
	Power Source		Power		1		1
	DVD		Shift + 2		2		2
	Top Menu		D.Menu / Top		3		3
	Up		Up		Audio		Audio / Lang I/II
	Left		Left		4		4
	Enter		Shift + OK		5		5
	Enter		OK		6		6
	Right		Right		7		7
	Down		Down		8		8
	Return		Back / Return		9		9
	<<		<< / Tune-		0		0
	Play		Play / Slow		Menu		Menu / Home
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				





Original		Rechange		Original		Rechange	
	Power Source		Power		1		1
	Tuner		Shift + 6		2		2
	Master Volume		Vol+		3		3
	Master Volume		Vol-		4		4
	Mute		Mute / Dimmer		5		5
	Band		Subtitle / EQ		6		6
	Tune+		>> / Tune+		Disp		Display / Media
	Tune+		Up		7		7
	T.Edit		Text / Goto		8		8
	Preset+		>> / Preset+		9		9
	Preset-		Left		D.Access		D.Menu / Top
	Enter		OK		0		0
	Preset-		<< / Preset-		Class		Shift + Display / Media
	Preset+		Right		Menu		Menu / Home
	Tune-		<< / Tune-		Search		Red / Netflix / Search
	Tune-		Down				
	MPX		Zoom / Size				

